



---

The following document contains information on Cypress products. Although the document is marked with the name "Spansion", the company that originally developed the specification, Cypress will continue to offer these products to new and existing customers.

**Continuity of Specifications**

There is no change to this document as a result of offering the device as a Cypress product. Any changes that have been made are the result of normal document improvements and are noted in the document history page, where supported. Future revisions will occur when appropriate, and changes will be noted in a document history page.

**Continuity of Ordering Part Numbers**

Cypress continues to support existing part numbers. To order these products, please use only the Ordering Part Numbers listed in this document.

**For More Information**

Please contact your local sales office for additional information about Cypress products and solutions.

**About Cypress**

Cypress (NASDAQ: CY) delivers high-performance, high-quality solutions at the heart of today's most advanced embedded systems, from automotive, industrial and networking platforms to highly interactive consumer and mobile devices. With a broad, differentiated product portfolio that includes NOR flash memories, F-RAM™ and SRAM, Traveo™ microcontrollers, the industry's only PSoC® programmable system-on-chip solutions, analog and PMIC Power Management ICs, CapSense® capacitive touch-sensing controllers, and Wireless BLE Bluetooth® Low-Energy and USB connectivity solutions, Cypress is committed to providing its customers worldwide with consistent innovation, best-in-class support and exceptional system value.



**32-BIT MICROCONTROLLER**  
**FM3 Family**

**Virtual Starter Kit**

***USER MANUAL***

---



For the information for microcontroller supports, see the following web site.

<http://www.spansion.com/support/microcontrollers/>



## Preface

Thank you for your continued use of SpanSion products.

Please read this document, this product series 'Data Sheet' and 'FM3 family Peripheral manual' before using Virtual Starter Kit (VSK) package.

### **This document purpose and target reader**

The document explains about VSK package function, behavior and how to use for engineers who develop products using this package.

#### **Note:**

*This manual only explains about package/simulator function and behavior. This manual does not include the explanation about product series function and specification.*

*You could refer to this product series 'Data Sheet' or 'FM3 family Peripheral manual' for series function and specification details.*

### **Trademark**

ARM and Cortex are the registered trademarks of ARM Limited in the EU and other countries.

Microsoft, Windows are registered trademarks of Microsoft Corporation in the U.S. and other countries.

QEMU is a trademark of Fabrice Bellard.

OSCI, SystemC are trademarks or registered trademarks of Open SystemC Initiative, Inc. In the United States and other countries are used with permission.

IAR Systems, IAR Embedded Workbench are trademarks or registered trademarks owned by IAR Systems AB.

The company names and brand names herein are the trademarks or registered trademarks of their respective owners.

### **Sample program and development environment**

SpanSion offers sample programs free of charge for using the peripheral functions of the FM3 family.

SpanSion also makes available descriptions of the development environment required for this family. Feel free to use them to verify the operational specifications and usage of this SpanSion microcontroller.

#### ■ Microcontroller support information

[http://www.spansion.com/Products/microcontrollers/32-bit-ARM-Core/fm3/Pages/overview\\_32fm3.aspx](http://www.spansion.com/Products/microcontrollers/32-bit-ARM-Core/fm3/Pages/overview_32fm3.aspx)

#### **Note:**

*The sample program is subject to be changed without notice. And the sample program's behavior and the way to use are only for standard case. Please make sure to test the sample program on your system before using the program.*

*Our company does not have any responsibility for any problem happening on your side when you use this sample program.*

### **This document composition**

Virtual Starter Kit user manual consists of following chapter.

CHAPTER1: Virtual Starter Kit

CHAPTER2: Simulator Function Specification

CHAPTER3: External Device  
CHAPTER4: Run Simulation  
CHAPTER5: Simulation Data Analyzing

## Related manual

The manuals related to VSK are listed below. See the manual appropriate to the applicable conditions.

The contents of these manuals are subject to change without notice. Contact us to check the latest versions available.

### **FM3 family peripheral manual**

Please refer to following document about each peripheral specification details of the product series supported by Virtual Starter Kit.

- FM3 Family PERIPHERAL MANUAL  
(Called "PERIPHERAL MANUAL" hereafter)
- FM3 Family PERIPHERAL MANUAL Timer Part  
(Called "Timer Part" hereafter)
- FM3 Family PERIPHERAL MANUAL Analog Macro Part  
(Called "Analog Macro Part" hereafter)
- FM3 Family PERIPHERAL MANUAL Communication Macro Part  
(Called "Communication Macro Part" hereafter)

### **FM3 family peripheral manual (MCU SIMULATOR VERSION)**

Regarding the list of peripherals of the MCU series supported by Virtual Starter Kit, there are differences in specification and behavior between simulator and real device. Please refer to the following document for these differences.

- FM3 Family PERIPHERAL MANUAL MCU SIMULATOR VERSION  
(Called "PERIPHERAL MANUAL MCU SIMULATOR VERSION" hereafter)
- FM3 Family PERIPHERAL MANUAL Timer Part MCU SIMULATOR VERSION  
(Called "Timer Part MCU SIMULATOR VERSION" hereafter)
- FM3 Family PERIPHERAL MANUAL Analog Macro Part MCU SIMULATOR VERSION  
(Called "Analog Macro Part MCU SIMULATOR VERSION" hereafter)
- FM3 Family PERIPHERAL MANUAL Communication Macro Part MCU SIMULATOR VERSION  
(Called "Communication Macro Part MCU SIMULATOR VERSION" hereafter)

### **Data sheet**

Please refer to following document about details of device specification, electrical characteristics, external dimensions and order type.

- Microcontroller 32bit original FM3 family DATA SHEET

#### **Note:**

*There are data sheet on each series.*

*Please refer to the data sheet of the product series you use.*

## Table of Contents

CHAPTER1: Virtual Starter Kit.....	9
1. Overview.....	10
2. System Structure .....	11
3. Included Files.....	12
CHAPTER2: Simulator Function Specification.....	13
1. Overview.....	14
2. Simulator Behavior.....	16
3. CPU .....	19
4. Memory Map.....	20
5. Peripheral .....	21
6. External Device Model.....	21
7. Debug Interface .....	23
8. Trace Function.....	24
8-1 I/O Trace Function.....	24
CHAPTER3: External Device.....	25
1. Analog Input Device.....	26
2. DIP Switch Device .....	27
3. Tactile Switch Device.....	28
4. Terminal Connection Device.....	29
5. Simulation Run Steps .....	30
CHAPTER4: Run Simulation.....	31
1. Configurations of CPU Function .....	32
2. Configurations of Microcontroller Function.....	33
3. Configurations of Device Function .....	34
3-1. Configurations of Analog Input Function .....	34
3-2. Configurations of DIP Switch Input Function.....	36
3-3. Configurations of Tactile Switch Input Function.....	38
3-4. Configurations of Terminal Connection Function.....	40
4. Configurations of Trace Function.....	42
4-1. Configurations of Trace Function .....	42
4-2. Configurations for Selected Target Trace .....	43
5. How to Run Simulation .....	44
6. How to Stop Simulation.....	45
CHAPTER5: Simulation Data Analyzing .....	47
1. Overview.....	48
2. Trace Type.....	49
3. Target Trace .....	50
4. Trace Result Visualization .....	51
MAJOR CHANGES.....	52

## Figures

Figure 1-1 Virtual Starter Kit system structure.....	11
Figure 2-1 FM3 Simulator phase and status .....	16
Figure 2-2 Run phase time chart .....	17
Figure 2-3 FM3 Simulator Memory Map .....	20
Figure 2-4 Trace function .....	24
Figure 3-1 Analog input device GUI.....	26
Figure 3-2 DIP switch GUI window.....	27
Figure 3-3 Tactile switch device GUI window .....	28
Figure 3-4 Terminal connection device connection figure.....	29
Figure 3-5 Simulation run steps flow chart .....	30
Figure 4-1 Simulator running window .....	44
Figure 4-2 Stop Simulation.....	45
Figure 5-1 Example view of trace result at GTKWave .....	51

## Tables

Table 1-1 Virtual Starter Kit composition element.....	11
Table 2-1 Peripheral function supported in FM3 Simulator.....	15
Table 2-2 Each time explanation .....	17
Table 2-3 Connections between I/O Ports and External Devices .....	22
Table 3-1 Analog input device composition element.....	26
Table 3-2 DIP switch composition element.....	27
Table 3-3 Tactile switch device composition element .....	28
Table 4-1 Configuration list at CPU function.....	32
Table 4-2 Configuration list at microcontroller function .....	33
Table 4-3 Analog input function option.....	34
Table 4-4 DIP switch function option .....	36
Table 4-5 Tactile switch function option .....	38
Table 4-6 Terminal connection device function option .....	40
Table 4-7 Trace function configurations.....	42
Table 4-8 Configuration option which select target trace .....	43
Table 5-1 Items which are outputted in trace file at signal type .....	49
Table 5-2 Items which is outputted in trace file at transaction type .....	49
Table 5-3 Traceable I/O port list.....	50







# CHAPTER1: Virtual Starter Kit

This chapter explains the functions of the Virtual Starter Kit.

---

1. Overview
2. System Structure
3. Included Files

## 1. Overview

Virtual Starter Kit is virtual evaluation environment which includes FM3 microcontroller and its external devices. FM3 microcontroller is provided by Spansion Inc (Spansion).

The same with actual machine(board), it is possible to connect IDE debugger to Virtual Starter Kit.

Virtual Starter Kit includes (1)hardware function simulator of FM3 microcontroller products (called "FM3 Simulator" hereafter) and (2)simulator of external devices (called "External Device Model" hereafter) which are controlled by FM3 microcontroller. The user can make these simulators operating together by simple instructions.

With Virtual Starter Kit, the users can conduct software development, test and system evaluation without evaluation board.

### Package basic information

- Package Name : Virtual Starter Kit
- Package Version : 1.00
- Package Type : Product Package

### Hardware requirements

Microsoft Windows 7 version SP1 or later.

### Required softwares

Visual C++2010 SP1 redistributable package

- Software : Visual C++ 2010 SP1 redistributable package (x86)
- Source : Microsoft

### Note :

1. Microsoft Visual C++ 2010 SP1 redistributable package (x86) is necessary for running application developed in Visual C++ 2010 SP1 when Visual C++ 2010 SP1 is not installed on the computer.
2. Microsoft Visual C++ 2010 SP1 redistributable package (x86) is available at Microsoft Corp. Download Center.

### Third party tool library

Virtual Starter Kit includes Open Source Softwares(OSS). OSS are "libcoqemu.dll", "libgcc\_s\_dw2-1.dll" and "libz-1.dll". Please refer to the documents of OSS license in folder of "LICENSE".

#### ■ QEMU

- Software : qemu-0.12.5
- Source : Please contact us by e-mail. dl.vsk-support@spansion.com
- License : <http://wiki.qemu.org/License>

### Note :

QEMU is provided under GPL license.

It is included in Virtual Starter Kit as built DLL file.

QEMU license include LGPL and BSD.

#### ■ SystemC & TLM2.0

- Software : systemc-2.2.0, TLM-2.0.1

- Source : <http://www.systemc.org/downloads/standards/systemc>
- License : [http://www.systemc.org/about/policies/SystemC\\_Open\\_Source\\_License.pdf](http://www.systemc.org/about/policies/SystemC_Open_Source_License.pdf)

**Note:**


The URL is subject to be changed by download source.

## 2. System Structure

Virtual Starter Kit system structure is shown in Figure 1-1 and explanation of each system element is shown in Table 1-1.

Virtual Starter Kit includes FM3 simulator and external device models. Virtual Starter Kit can connect with IDE Software Debugger.

**Figure 1-1 Virtual Starter Kit system structure**

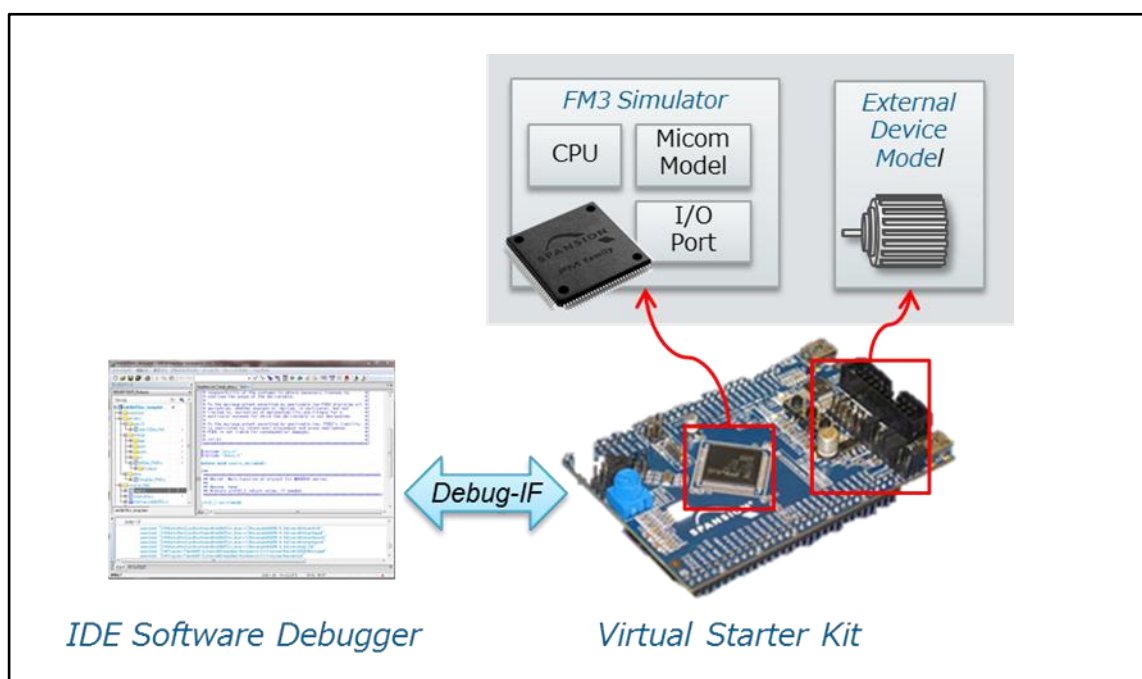

**Table 1-1 Virtual Starter Kit composition element**

Composition element	Explanation
Virtual Starter Kit	This package. Included FM3 Simulator, External Device Model.
FM3 Simulator	Included FM3 microcontroller model which simulated Cortex-M3 CPU function and FM3 microcontroller hardware function. (*1)
External Device Model	External device model which connect to FM3 Simulator peripheral function.
IDE Software Debugger	Software debugger which connect to Virtual Starter Kit when run FM3 simulator.

\*1: FM3 Microcontroller product series which FM3 Simulator supported is different on each package.



## CHAPTER2: Simulator Function Specification

This chapter explains the Simulator functions specification.

---

- 1 : Overview
- 2 : Simulator Behavior
- 3 : CPU
- 4 : Memory Map
- 5 : Peripheral
- 6 : External Device Model
- 7 : Debug Interface
- 8 : Trace Function

## 1. Overview

FM3 Simulator is used to simulate hardware functions of FM3 microcontroller provided by Spansion. FM3 microcontroller is 32 bit general-purpose RISC microcontroller, whose CPU is Cortex™-M3 core of ARM Limited.

In FM3 Simulator, QEMU is used as the Instruction set simulator of Cortex-M3. It allows users to conduct a software development with FM3 Simulator as the same with actual machine.

Interface to connect microcontroller function I/O with External device model is also available in FM3 Simulator. It allows the users to run FM3 simulator with external devices connected.

### **Simulator basic information**

Simulator Name : FM3 Simulator MB9B510R series

Version : 1.20

Target Series : MB9B510R series

### **About FM3 Simulator supporting peripheral function**

FM3 Simulator supporting peripheral function is different according to FM3 Simulator objective lineup products and simulator version.

Supported peripheral function is shown at Table 2-1.

**Table 2-1 Peripheral function supported in FM3 Simulator**

	Peripheral function	description
Basic peripheral	Clock	available
	High rate CR timing	available
	Clock monitoring function	restriction of use *1
	Reset	available
	Low voltage detection	available
	Low power consumption mode	not available
	Interrupt	available
	External interrupt · NMI control	available
	DMAC	available
	I/O port	available
	CRC (Cycle Redundancy Check)	available
	External bus interface	restriction of use *2
	Flash memory	restriction of use *2
Timer	Watch dog timer	available
	Dual timer	available
	Watch counter prescaler	available
	Watch counter	available
	Real time clock	not available
	Base timer I/O selector function	available
	Base timer	available
	Multifunction timer	available
	PPG	restriction of use *3
	Quad counter	restriction of use *4
Analog macro	12bit A/D converter	available
	A/D timer trigger selector	available
	10bit D/A converter	not available
	LCD controller	not available
Communicate macro	Multifunction serial(UART)	available
	Multifunction serial (CSIO)	not available
	Multifunction serial (LIN)	not available
	Multifunction serial (I2C)	not available
	USB/Ethernetclock generate	not available
	USB	not available
	Ethernet	not available
	CAN prescaler	not available
	CAN controller	not available
	HDMI-CEC/remote control receive	not available

\*1: If the CSV function is enabled, the clock failure is detected when the main clock period or the sub clock period is 0ps. If the FCS function is enabled, the anomalous frequency is detected when the main clock period is 0ps.

\*2: External bus interface and Flash Memory register is not supported. It is replaced these area with RAM.

\*3: PPG does not support PPG IGBT mode.

\*4: Quad Counter does not support Quad Counter position rotation counter display function.

Please refer to other document about peripheral function which you using lineup products.



## 2. Simulator Behavior


FM3 Simulator start simulation by booting FM3 Simulator main unit.

FM3 Simulator behavior has 3 phases.

- Initialization phase
- Run phase (Reset state /Normal state /Debug state)
- End phase

FM3 Simulator phase and status is shown at Figure 2-1.

**Figure 2-1 FM3 Simulator phase and status**

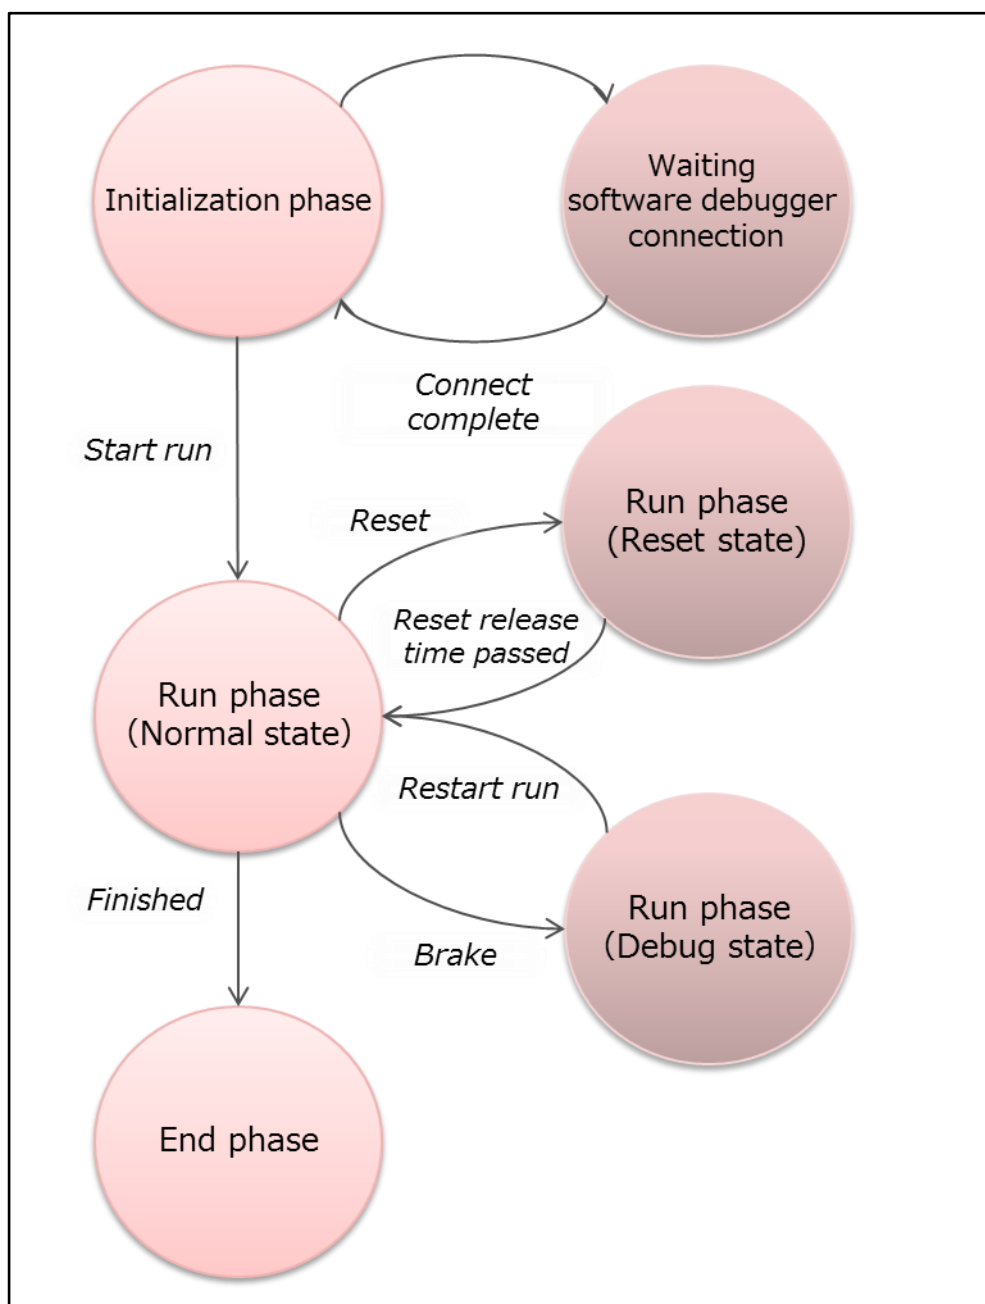

### Initialization phase

At Initialization phase, CPU function configuration, microcontroller function configuration, setting of external connection interface and Device initialization are done. (CPU function configuration means to load image file which runs simulation)

During FM3 Simulator's Initialization, simulation time keep zero, CPU function and microcontroller function do not run. External input signal from external connection interface can not received by FM3 Simulator.

After FM3 Simulator initializing configuration finishes, FM3 Simulator automatically moves to Run phase.

If software debugger connection configuration is enabled, FM3 Simulator will wait for connection notice from software debugger. After FM3 Simulator connects to software debugger, FM3 Simulator receives a register access from software debugger, then FM3 Simulator move to Run phase.


### Run phase

Run phase has 3 states.

- Reset state
- Normal state
- Debug state

Run phase time chart is shown at Figure 2-2 and explaining on each time is shown at Table 2-2.

**Figure 2-2 Run phase time chart**

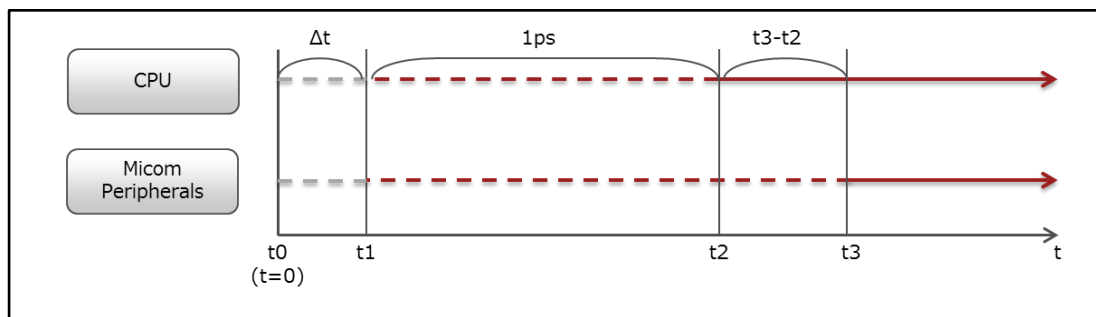

**Table 2-2 Each time explanation**

Timing	Explanation
t0	Simulation starting time
t1	Power on reset issuing time. t1 is issued $\Delta t$ time after t0.
t2	Power on reset release issuing time. t2 is issued 1ps later after t1. Program starting time. Peripheral initial setting time to the register.
t3	Between t3 and t2 interval is different depending on software program.

**■ Reset state**

It is different between simulation start time and program start time because simulation starts after reset releases.

Immediately after moving to Run phase, FM3 Simulator issues power-on reset, then do not run the program. Peripheral function does not run also, even external signal is input to FM3 Simulator.

After 1ps from start simulation, power-on reset is released automatically.

Then program starts and move to Run phase(Normal condition).

**■ Normal state**

Each peripheral function of FM3 microcontroller starts running after power-on reset is released, and then change to accessible condition from external interface.

In the normal condition, if a system termination signal from simulator console or internal abnormality is detected, FM3 Simulator moves to End phase.

**■ Debug state**

In the run phase(Normal state), if application of software debugger comes to a break, simulator move to Run phase(Debug state).

In the debug state simulation temporarily stops.

In the debug status, CPU function and microcontroller function do not run, and simulation time doesn't change.

If application of software debugger starts again, simulator moves back to Run phase(Normal state).

**End phase**

In the End phase, simulation is stops and simulation finishes.

### 3. CPU

FM3 Simulator uses QEMU as Cortex-M3 CPU function.

QEMU includes Cortex-M3 processor instruction set simulator, nested vectored interrupt controller(NVIC) and SysTick timer function.

Please refer to web site below about QEMU details.

<http://wiki.qemu.org/>



FM3 Simulator has maximum memory size regardless of lineup products.

2 GB of 0x60000000-0xDFFFFFFF area as External bus area, you can connect External memory device to this memory area.

**Note:**

*Not available on Virtual Starter Kit (version of 2014 March).*

Some of peripherals are not supported depending on product line up. We replace not supported peripheral area with RAM on FM3 Simulator.

## 5. Peripheral

Please refer to 'FM3 Family PERIPHERAL MANUAL(MCU SIMULATOR VERSION)' about each peripheral details.

## 6. External Device Model

Explain about External Device Model.

FM3 Simulator can connect to External device model of respective external device.

Details of Connections between FM3 Simulator's I/O ports and External Device models are shown at Table 2-3.

Table 2-3 Connections between I/O Ports and External Devices

Included Function	IO Port	External Device Model
Power	VCC	-
Clock	X0	-
	X0A	-
Reset	INITX	-
External interrupt • NMI control	INT00-INT07	Tactile Switch
	INT08-INT15	-
	NMIX	-
I/O port	P00-P07	DIP Switch
	P00-P0F	-
	P10-P1F	Tactile Switch
	P20-P2F	-
	P30-P3F	-
	P40-P4F	-
	P50-P5F	-
	P60-P6F	-
	P70-P7F	-
	P80-P8F	-
	P90-P9F	-
	PA0-PAF	-
	PB0-PBF	-
	PC0-PCF	-
	PD0-PDF	-
	PE0-PEF	-
	PF0-PFF	-
External bus interface	EXT_master	-
A/D converter	ADTG0-ADTG2	-
	AN00	Analog Input
	AN01-AN15	-
	AVCC	-
	AVRH	-
	AVSS	-
Base Timer	TIOA0-TIOA7	-
	TIOB0-TIOB7	-
Multifunction Serial	SIN0	termif_server
	SOUT0	termif_server
	SIN1-SIN7	
	SOUT1-SOUT7	
Multifunction Timer	FRCK0-FRCK2	-
	IC00-IC03	-
	IC10-IC13	-
	IC20-IC23	-
	RTO00-RTO05	-
	RTO10-RTO15	-
	RTO20-RTO25	-

Please refer to 'CHAPTER3:External Device' about External Device Model.

## 7. Debug Interface

FM3 Simulator includes Debug interface to connect to software debugger which supports gdb port.

Software debugger supporting gdb base connection can connect to FM3 Simulator.

### **About software debugger which supports gdb port**

Following software debuggers can connect with FM3 Simulator.

\* Please refer to each tool bender website for latest support status.

The following is the latest status in March 2014.

#### **IAR Embedded Workbench**

Software : IAR Embedded Workbench

Source : IAR Systems

#### **Sourcery Code-Bench**

Software : Sourcery Code-Bench 2011.09.69

Source : Mentor Graphics Corporation



## 8. Trace Function

### 8-1 I/O Trace Function


Explain about I/O Trace function.

FM3 Simulator also has I/O trace function to trace the value of a I/O signal.

If you use Trace function you can analyze simulation data.

Trace function schematic view is shown in Figure 2-4.

**Figure 2-4 Trace function**

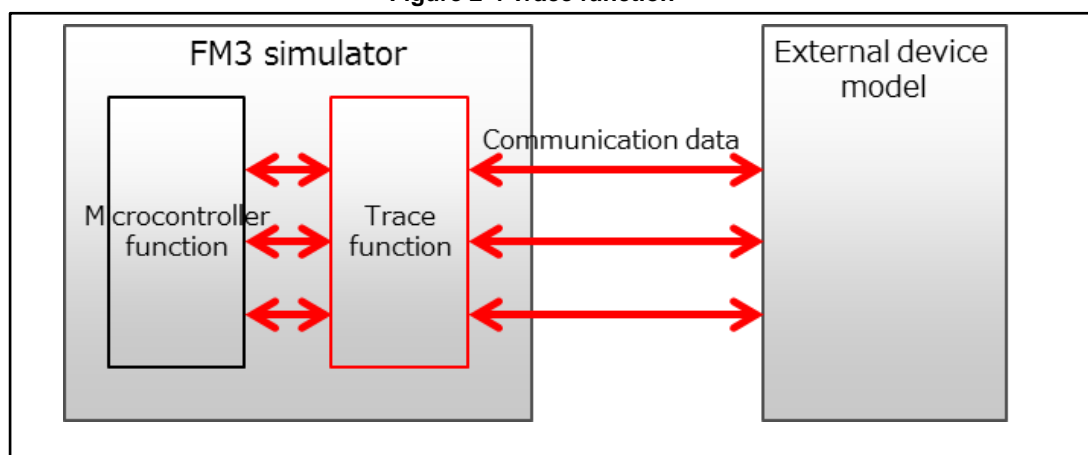

Please refer to 'CHAPTER5:Simulation Data Analyzing' about trace function and simulation data analyze details.

## CHAPTER3: External Device

This chapter explains the functions of the External Device.

---

- 1 : Analog Input Device
- 2 : DIP Switch Device
- 3 : Tactile Switch Device
- 4 : Terminal Connection Device

## 1. Analog Input Device

Analog input device is a GUI program which provides analog value to FM3 Simulator.

Analog input device specification is shown below.

Port type : Transaction type

Data type : Analog value

Direction(\*1) : Input


Channel number : 1

Connectable port : A/D Converter(ADC) analog input(ANxx)

\*1: Direction(Input/Output) is seen from FM3 Simulator

Analog input device GUI is shown at Figure 3-1 and composition element explanation is shown at Table 3-1.

**Figure 3-1 Analog input device GUI**

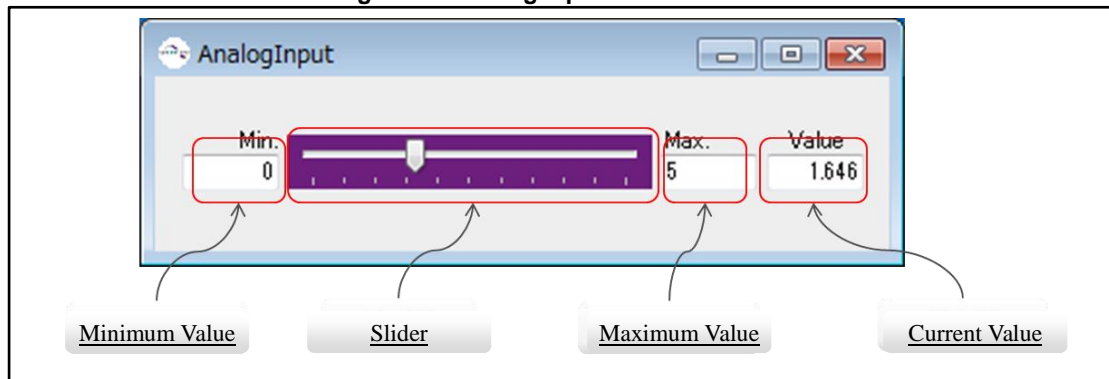

**Table 3-1 Analog input device composition element**

Composition element	Explanation
Minimum Value	This textbox is showed minimum value and setting minimum value is available. (Default value is 0).
Maximum Value	This textbox is showed maximum value and setting maximum value is available. (Default value is 5).
Current Value	This textbox is showed the analog input value and setting the analog input value is available. (Default is Minimum Value).
Slider	This slider is showed the position of analog input value. Changing the analog input value is available by the bar slide. (Default is Minimum Value).

### Function

Setting the analog input value is available by the bar slide. The value unit is Volt.

Also, setting the analog input value is available by set a value to 'Value' textbox.

The value range of analog input bar can be changed by modifying the Min's and Max's value. Enter a value number to 'Min' textbox to change Min value, enter a value number to 'Max' textbox to change Max value.

Maximum value must be bigger than Minimum value.

The characters which are not numeric character can not be accepted. In this case, error message is displayed.

## 2. DIP Switch Device

DIP switch device is a GUI program which is used to input digital value. The GUI includes 8 switches, each switch is used to input digital value for 1 bit.

DIP switch device specification is shown below.

Port type : Signal type

Data type : 1bit digital value

Direction(\*1) : Input

Channel number : 8

Connectable port(\*2) :

General I/O port input(Pxx)

Timer trigger input(TIOAx, TIOBx)

Input capture input(ICx)

External interrupt input(INTxx)

External reset input(INITX)

Non-maskable interrupt(NMIX)

A/D converter trigger input(ADTGx)

\*1: Direction (Input/Output) is seen from FM3 Simulator

\*2: Connected to general I/O port P00-P07 in this package.

DIP switch device GUI window is shown at Figure 3-2 and composition element explanation is shown at Table 3-2.

Figure 3-2 DIP switch GUI window

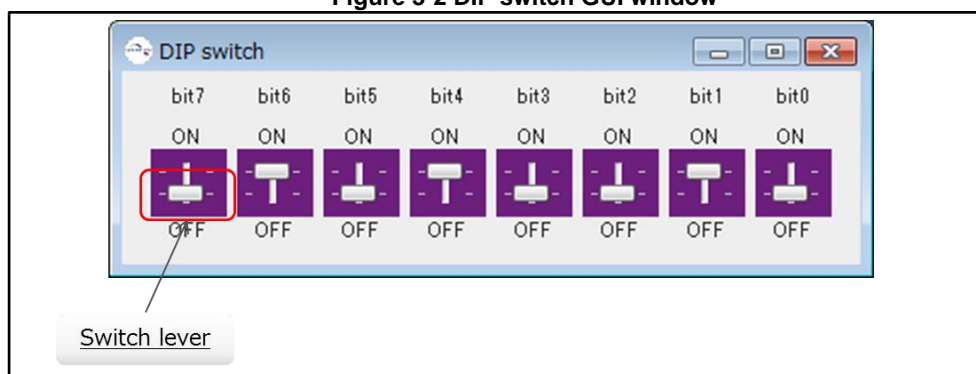


Table 3-2 DIP switch composition element

Composition element	Explanation
Switch lever	1bit digital value input lever (Default is OFF).

### Function

Move up the switch lever to switch ON. Move down the switch lever to switch OFF. The switch status is kept until the switch lever moves up or down again. When switch is ON, input value to FM3 Simulator is 1, when switch is OFF, input value to FM3 Simulator is 0.

### 3. Tactile Switch Device

Tactile switch device is a GUI program which is used to input digital value. The GUI includes 8 switches, each switch is used to input digital value for 1 bit.

Tactile switch device specification is shown below.

Port type : Signal type

Data type : 1bit digital value

Direction(\*1) : Input

Channel number : 8

Connectable port(\*2) :

General I/O port input(Pxx)

Timer trigger input(TIOAx, TIOBx)

Input capture input(ICx)

External interrupt input(INTxx)

External reset input(INITX)

Non-maskable interrupt(NMIX)

A/D converter trigger input(ADTGx)

\*1: Direction (Input/Output) is seen from FM3 Simulator.

\*2: Connected to External interrupt input INT00-INT07 in this package.

Tactile switch device GUI window is shown at Figure 3-3 and composition element explanation is shown at Table 3-3.

Figure 3-3 Tactile switch device GUI window

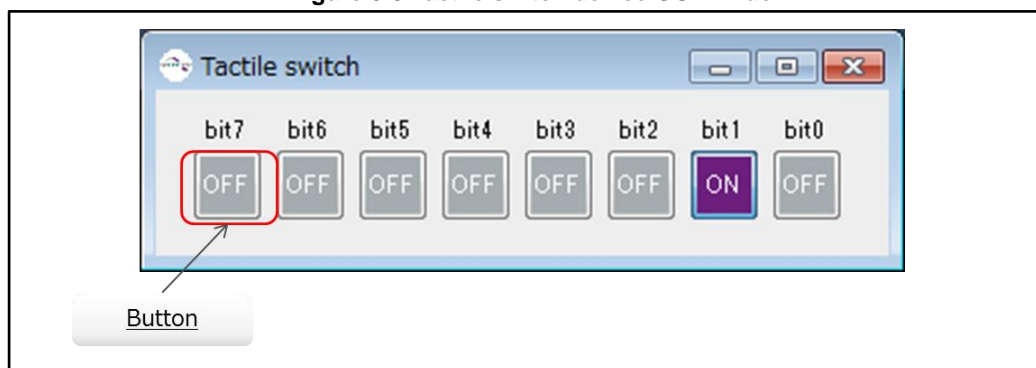


Table 3-3 Tactile switch device composition element

Composition element	Explanation
Button	1bit digital value input lever (Default is OFF).

#### Function

Move up the switch lever to switch ON. Move down the switch lever to switch OFF. When switch is ON, input value to FM3 Simulator is 1, when switch is OFF, input value to FM3 Simulator is 0.

## 4. Terminal Connection Device

Terminal connection device is device model which is used to connect FM3 Simulator with a terminal emulator.

Terminal connection device specification is shown below.

Port type : Transaction type

Data type : 8bit digital value

Direction(\*1) : Input, Output

Channel number : 1

Connectable port(\*2) :


Multifunction serial(UART) serial input(SINx)

Multifunction serial(UART) serial output(SOTx)

\*1: Direction (Input/Output) is seen from FM3 Simulator

\*2: Connected to serial input SIN0 and serial output SOT0 at Multifunction serial(UART) in this package.

**Figure 3-4 Terminal connection device connection figure**

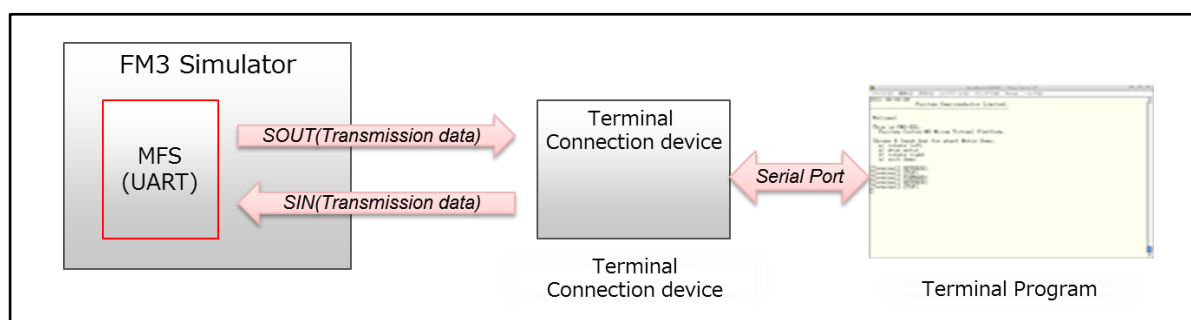

### Function

Terminal connection device sends data which is received from UART to terminal emulator.

Terminal connection devices send data which is received from terminal emulator to UART byte by byte.

Terminal program behavior (Linefeed code handling, Data transmit unit) depends on the Terminal program configuration.

### Note :

1. Configuration example when using Tera Term Version 4.73.

Tera Term GUI  
Terminal setup:

New-line: Receive: LF, Transmit: CR  
Local echo: OFF


TERMINAL.ini

; Line at a time mode  
EnableLineMode = OFF

## 5. Simulation Run Steps

Simulation run steps flow chart is shown at Figure 3-5.

**Figure 3-5 Simulation run steps flow chart**

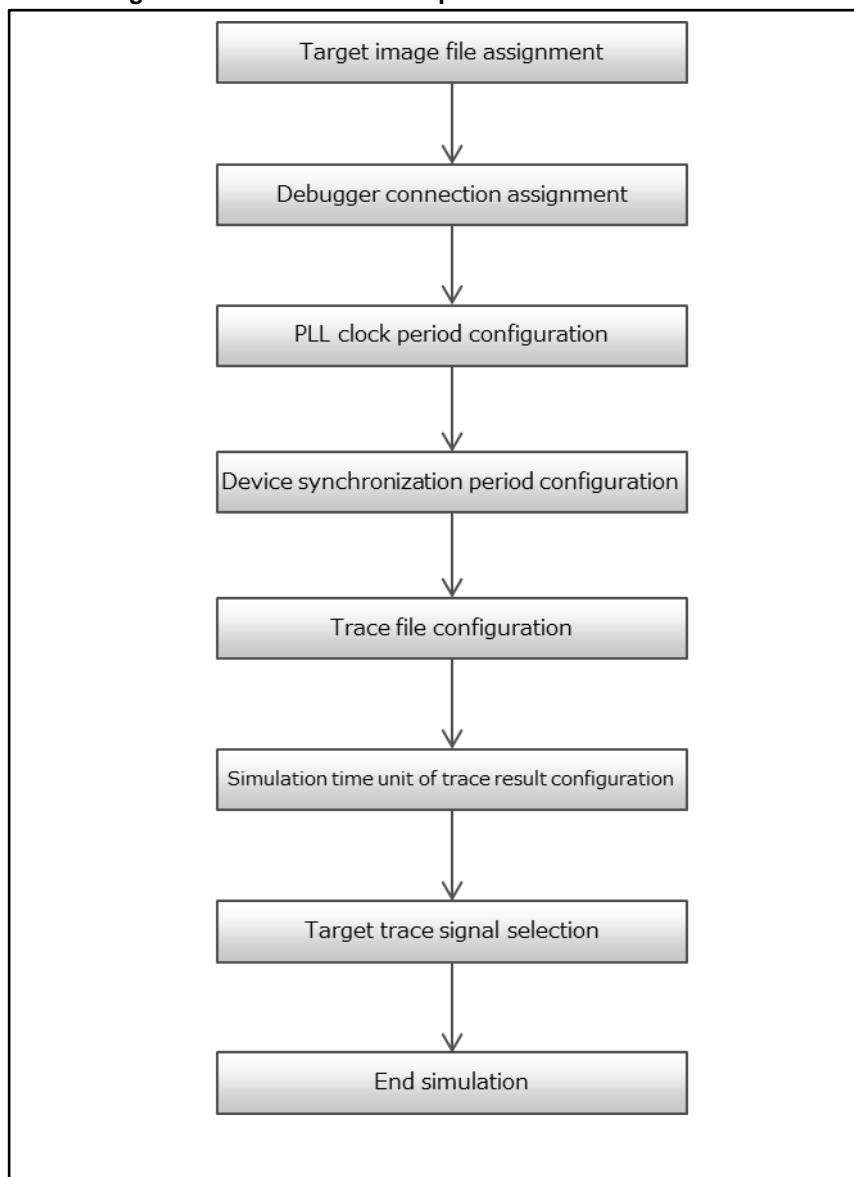

# CHAPTER4: Run Simulation

**This chapter explains the functions of the Run Simulation.**

---

1.
  1. Configurations of CPU Function
  2. Configurations of Microcontroller Function
  3. Configurations of Device Function
  4. Configurations of Trace Function
  5. How to Run Simulation



## 1. Configurations of CPU Function

The CPU function is configured by using CPU configuration file (cpu.ini).

Configurations are shown at Table 4-1.

**Table 4-1 Configuration list at CPU function**

Option	Entry name	Explanation
Target image file configuration	ELF_FILE	Configuration of file path of FM3 Simulator's image file.
Software debugger configuration	GDB_STUB_PORT	Configuration of Software debugger connection.

### Target image file configuration

Configuration of file path of FM3 Simulator's image file is shown below.

#### Syntax

```
[GENERAL]
ELF_FILE=TargetImagePath
```

#### Section

GENERAL

#### EntryName

ELF\_FILE

#### Value

TargetImagePath  
Type : String (Default value : Sample image including simulator)

#### Remarks

Please assign ELF format file to this option.  
This configuration cannot skip.

#### Example

ELF\_FILE= Sample image including simulator

### Software debugger configuration

Configuration of GdbStb port number, which is used in connection with software debugger, is shown below.

#### Syntax

```
[GENERAL]
GDB_STUB_PORT=GdbStubPort
```

#### Section

GENERAL

#### EntryName

GDB\_STUB\_PORT

#### Value

GdbStubPort  
Type : Int (Default value : 1234)

#### Remarks

If this option is disabled, software debugger is not connected.  
This option is disabled in default.

#### Example

GDB\_STUB\_PORT=1234

## 2. Configurations of Microcontroller Function

The MCU function is configured by using MCU configuration file (micom.ini).  
Configurations are shown at Table 4-2.

**Table 4-2 Configuration list at microcontroller function**

Option	Entry name	Explanation
PLL period configuration	PLL_CLK_PERIOD	Configuration of PLL clock period.

#### PLL clock period configuration

PLL clock period configuration is shown below.

#### Syntax

[GENERAL]  
PLL\_CLK\_PERIOD=PIIClockPeriod

#### Section

GENERAL

#### EntryName

PLL\_CLK\_PERIOD

#### Value

PIIClockPeriod  
Type : double (Default value : 6944.4 (ps) ... Correspond to 144MHz)

#### Remarks

Please configure the value as 'ps' scale.

#### Example

PLL\_CLK\_PERIOD=6944.4

## 3. Configurations of Device Function

### 3-1. Configurations of Analog Input Function

Analog input function is configured by using analog input configuration file (analog\_input.ini).

Configurations are shown at Table 4-3.

**Table 4-3 Analog input function option**

Option	Entry name	Explanation
Period of synchronization	SYNC_PERIOD	Period of synchronization, between FM3 Simulator and Analog input device.
Unit of synchronization period	TIME_UNIT	Unit of synchronization period, between FM3 Simulator and Analog input device.

#### Period of synchronization

Configuration of synchronization period, between FM3 Simulator and Analog input device, is shown below.

##### Syntax

```
[GENERAL]
SYNC_PERIOD=Value
```

##### Section

GENERAL

##### EntryName

SYNC\_PERIOD

##### Value

Value  
Type : unsigned int (Default value : 1ms)

##### Remarks

If the period value which is smaller than configured CPU clock period, there is a possibility that FM3 simulator can drop any analog input data. Therefore, please configure the period value bigger than CPU clock. Please refer 'TIME\_UNIT' about the unit.

##### Example

```
SYNC_PERIOD=1
```

#### Unit of synchronization period

Configuration of synchronization period unit, between FM3 Simulator and Analog input device, is shown below.

##### Syntax

```
[GENERAL]
TIME_UNIT=unit
```

##### Section

GENERAL

##### EntryName

TIME\_UNIT

**Value**

unit

Type : string (Default value : ms)

**Remarks**

If the period which smaller than CPU clock is configured, you have risk of lost input value from analog input GUI. Therefore, please configure the period which bigger than CPU clock. Please refer 'SYNC\_PERIOD' about the period value.

**Example**

TIME\_UNIT=ms

## 3-2. Configurations of DIP Switch Input Function

DIP switch input function is configured by using DIP switch input configuration file (dip\_switch.ini).

Configurations are shown at Table 4-4.

**Table 4-4 DIP switch function option**

Option	Entry name	Explanation
Period of synchronization	SYNC_PERIOD	Period of synchronization, between FM3 Simulator and DIP switch input device.
Unit of synchronization period	TIME_UNIT	Unit of synchronization period, between FM3 Simulator and DIP switch input device.

### Period of synchronization

Configuration of synchronization period, between FM3 Simulator and DIP switch input device, is shown below.

#### Syntax

```
[GENERAL]
SYNC_PERIOD=Value
```

#### Section

GENERAL

#### EntryName

SYNC\_PERIOD

#### Value

Value  
Type : int (Default value : 1)

#### Remarks

If the period value which is smaller than configured CPU clock period, there is a possibility that FM3 simulator can drop any input data from DIP Switch. Therefore, please configure the period value bigger than CPU clock. Please refer 'TIME\_UNIT' about the unit.

#### Example

```
SYNC_PERIOD=1
```

### Unit of synchronization period

Configuration of synchronization period unit, between FM3 Simulator and DIP switch input device, is shown below.

#### Syntax

```
[GENERAL]
TIME_UNIT=unit
```

#### Section

GENERAL

#### EntryName

TIME\_UNIT

**Value**

unit

Type : string (Default value : ms)

**Remarks**

If the period value which is smaller than configured CPU clock period, there is a possibility that FM3 simulator can drop any input data from DIP Switch. Therefore, please configure the period value bigger than CPU clock. Please refer 'SYNC\_PERIOD' about the period value.

**Example**

TIME\_UNIT=ms

### 3-3. Configurations of Tactile Switch Input Function

Tactile switch input function is configured by using Tactile switch input configuration file (tactile\_switch.in). Configurations are shown at Table 4-5.

**Table 4-5 Tactile switch function option**

Option	Entry name	Explanation
Period of synchronization	SYNC_PERIOD	Period of synchronization, between FM3 Simulator and Tactile switch input device.
Unit of synchronization period	TIME_UNIT	Unit of synchronization period, between FM3 Simulator and Tactile switch input device.

#### Period of synchronization

Configuration of synchronization period, between FM3 Simulator and Tactile switch input device, is shown below.

##### Syntax

```
[GENERAL]
SYNC_PERIOD=Value
```

##### Section

```
GENERAL
```

##### EntryName

```
SYNC_PERIOD
```

##### Value

```
Value
Type : int (Default value : 1)
```

##### Remarks

If the period value which is smaller than configured CPU clock period, there is a possibility that FM3 simulator can drop any input data from Tactile Switch. Therefore, please configure the period value bigger than CPU clock. Please refer 'TIME\_UNIT' about the unit.

##### Example

```
SYNC_PERIOD=1
```

#### Unit of synchronization period

Configuration of synchronization period unit, between FM3 Simulator and Tactile switch input device, is shown below.

##### Syntax

```
[GENERAL]
TIME_UNIT=unit
```

##### Section

```
GENERAL
```

##### EntryName

```
TIME_UNIT
```

**Value**

unit

Type : string (Default value : ms)

**Remarks**

If the period value which is smaller than configured CPU clock period, there is a possibility that FM3 simulator can drop any input data from Tactile Switch. Therefore, please configure the period value bigger than CPU clock. Please refer 'SYNC\_PERIOD' about the period value.

**Example**

TIME\_UNIT=ms



### 3-4. Configurations of Terminal Connection Function

Terminal connection function is configured by using terminal connection configuration file (termif\_server.ini).  
Configurations are shown at Table 4-6.

**Table 4-6 Terminal connection device function option**

Option	Entry name	Explanation
Debug mode	DEBUG	Configuration of debug mode for Terminal connection device.
Host name	HOST	Configuration of Host name for Terminal connection device.
Port number	PORT	Configuration of Port number for terminal connection device.
Connection configuration	CONNECT	Configuration of connection (Disable/Enable) for Terminal connection device.

#### Debug mode

Configuration of debug mode for Terminal connection device is shown below.

##### Syntax

```
[GENERAL]
DEBUG=DebugMode
```

##### Section

GENERAL

##### EntryName

DEBUG

##### Value

```
DebugMode
Type : int (Default value : 0)
0 : Disenable
1 : Enable (Debug message is shown under simulation running.)
```

##### Remarks

##### Example

```
DEBUG=0
```

#### Host name

Configuration of Host name for Terminal connection device is shown below.

##### Syntax

```
[NETWORK]
HOST= HostName
```

##### Section

NETWORK

##### EntryName

HOST

**Value**

HostName  
Type : String (Default value : localhost)

**Remarks**

This configuration used for port connection with Terminal bridge.

**Example**

HOST=localhost

**Port number**

Configuration of Port number for terminal connection device is shown below.

**Syntax**

[NETWORK]  
PORT=PortNumber

**Section**

NETWORK

**EntryName**

PORT

**Value**

PortNumber  
Type : int (Default value : 1204)

**Remarks**

This configuration used for port connection with Terminal bridge.

**Example**

PORT=1204

**Connection configuration**

Configuration of connection(Disable/Enable) for Terminal connection device is shown below.

**Syntax**

[NETWORK]  
CONNECT=Connect

**Section**

NETWORK

**EntryName**

CONNECT

**Value**

Connect  
Type : int (Default value : 0)  
0 : Disable (Terminal program unconnected)  
1 : Enable (Terminal program connected)

**Remarks**

This configuration used for port connection with Terminal bridge.  
Terminal connection bridge program is to be booted before boot the simulator when this configuration configure to 1.  
Please configure 0 to this configuration when Terminal program does not connect.

**Example**

Connect=1

## 4. Configurations of Trace Function

### 4-1. Configurations of Trace Function

Trace function is configured by using Trace configuration file (svcd.ini). Configurations are shown at Table 4-7.

**Table 4-7 Trace function configurations**

Option	Entry name	Explanation
Trace file name	VCD_FILE	Configuration of Trace file name(.vcd) including file path.
Simulation unit time	TIME_UNIT	Configuration of simulation minimum unit time.

#### Trace file name

Configuration of Trace file name(.vcd), possible to add the file path, is shown below.

#### Syntax

```
[GENERAL]
VCD_FILE=file
```

#### Section

```
GENERAL
```

#### EntryName

```
VCD_FILE
```

#### Value

```
file
Type : String (Default value : ..\svcd.vcd)
```

#### Remarks

IF VCD\_FILE setting is default value, the svcd.vcd is created in the VirtualStarterKit folder.

#### Example

```
VCD_FILE= svcd.vcd
```

#### Simulation minimum unit time

Configuration of simulation minimum unit time is shown below.

#### Syntax

```
[GENERAL]
TIME_UNIT=Value
```

#### Section

```
GENERAL
```

#### EntryName

```
TIME_UNIT
```

#### Value

```
Value
Type : int (Default value : ps)
```

#### Remarks

#### Example

```
TIME_UNIT=ps
```

## 4-2. Configurations for Selected Target Trace

Configurations for selected target trace are configured by using Trace select configuration file (trace.ini).  
Configurations are shown at Table 4-8.

**Table 4-8 Configuration option which select target trace**

Option	Entry name	Explanation
Trace ON/OFF	TracePortName	Target trace signal name is configured as EntryName and ON/OFF is configured as the Value.

### Trace ON/OFF

Target trace signal name is configured as EntryName and ON/OFF is configured Value.

The example is shown below.

### Syntax

```
[GENERAL]  
TracePortName=ON/OFF
```

### Section

GENERAL

### EntryName

TracePortName  
Type : String (Target trace signal name)

### Value

on/off  
Type : String (Default value : OFF)

### Remarks

### Example

```
[GENERAL]  
P00=ON  
SOT1=OFF
```

Selectable port as TracePortName is shown at 'Table 5-3 Traceable I/O port list' at 'CHAPTER5: Simulation Data Analyzing'.

## 5. How to Run Simulation


To run the simulation, execute the batch file VirtualStarterKit.bat.

If the simulation runs properly, the simulator will wait to connect a Terminal Program as shown in Figure 4-1.

Connect a Terminal Program to the Terminal Connection Device of the simulator.

Refer to sub section 3-4 for the Terminal Connection setting.

**Figure 4-1 Simulator running window**

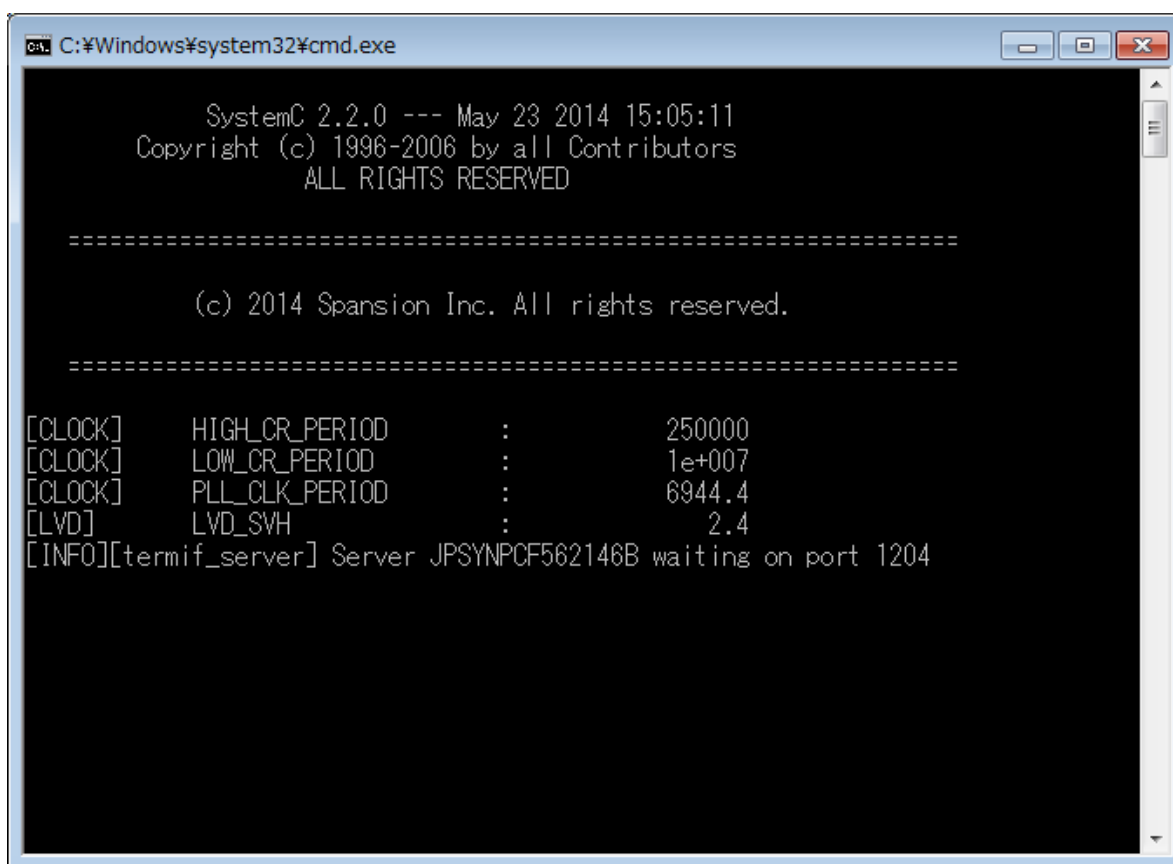


## 6. How to Stop Simulation

To stop the simulation, click an “x” button on the Simulator running window.

If the Debugger connects to simulator, please disconnect it before stop simulation.

Figure 4-2 Stop Simulation

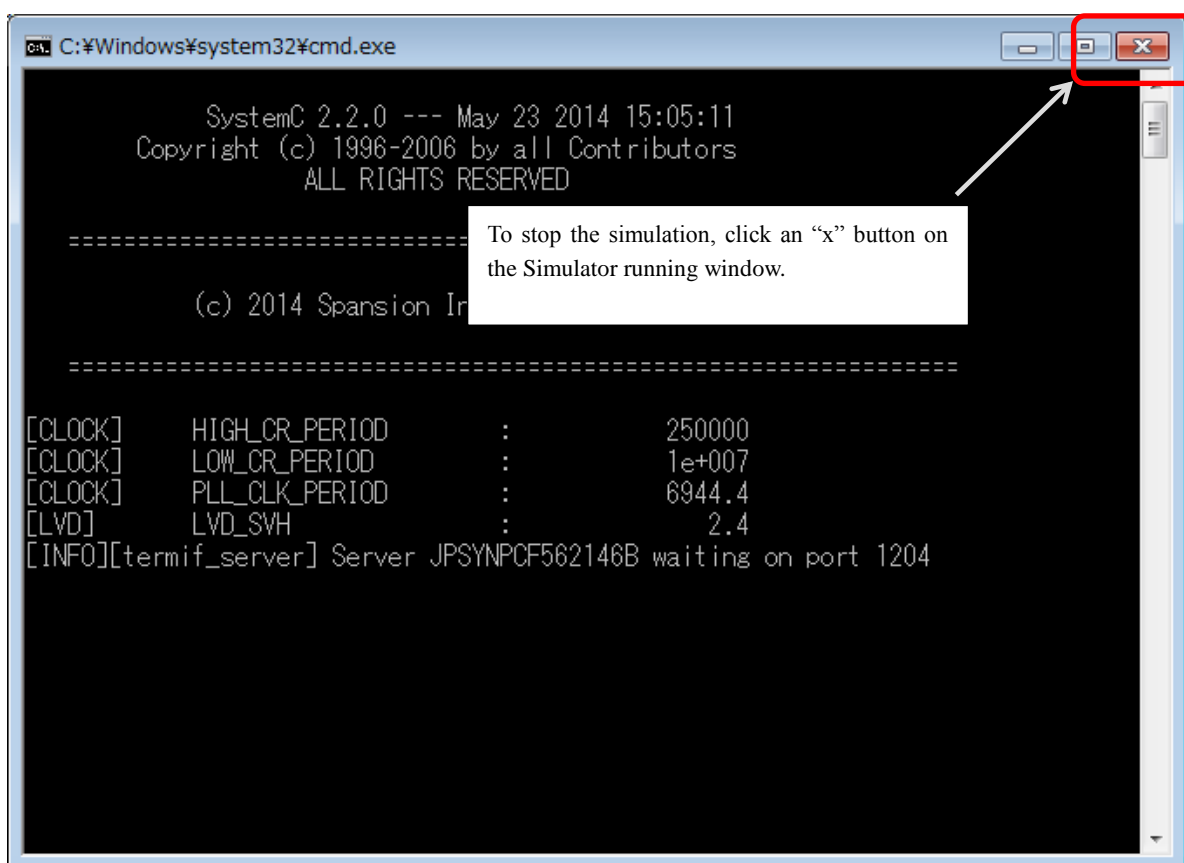



# CHAPTER5: Simulation Data Analyzing

**This chapter explains the functions of the Simulation Data Analyzing.**

---

1. Overview
2. Trace Type
3. Target Trace
4. Trace Result Visualization



## 1. Overview

FM3 Simulator has I/O trace function to trace the value of a I/O signal.

Trace function option configuration is necessary for I/O trace function before the simulation run. (See also '4-5. Option configuration of Trace function')

VCD format trace file is output to a trace file after simulation run finishes when any signal becomes a target to be traced.

If you use Trace function you can analyze simulation data.

## 2. Trace Type

Trace function is divided into two types, depending on target trace port data type. Two types are shown below.

- Signal type
- Transaction type

### Signal type

Signal type port is used for port of signal level.

In case of selecting signal type port as target trace, items which is outputted in trace file(.vcd) are shown at Table 5-1.

**Table 5-1 Items which are outputted in trace file at signal type**

Items	Explanation
ContentID	Data type ID of selected port as target trace.
Data	Communication data of selected port as target trace.

### Transaction type

Transaction type port is used for port including multiple signals in one-transaction.

In case of selecting transaction type port as target trace, items which is outputted in trace file(.vcd) are shown at Table 5-2.

**Table 5-2 Items which is outputted in trace file at transaction type**

Items	Explanation
ContentID	Data type ID which selected as trace target port conducting.
Mode	Communication mode of selected port as target trace. (*1)
Command	Transaction handling which write/read to communication data. (WRITE, READ)
Address	Transaction destination address (*2).
Length	Communication data length (byte).
Data	Communication data of selected port as target trace.
Response	Transaction response status.

\*1: Items which are outputted only Multifunction serial.

\*2: Items which are outputted only External Bus Interface.

### 3. Target Trace

Traceable I/O port list on FM3 Simulator is shown at Table 5-3.

**Table 5-3 Traceable I/O port list**

Including Function		Tracetype
Power	VCC	Signal
Clock	X0	Signal
	X0A	Signal
Reset	INITX	Signal
External interrupt • NMI control	INT00-INT07	Signal
	INT08-INT15	Signal
	NMIX	Signal
I/O port	P00-P07	Signal
	P00-P0F	Signal
	P10-P1F	Signal
	P20-P2F	Signal
	P30-P3F	Signal
	P40-P4F	Signal
	P50-P5F	Signal
	P60-P6F	Signal
	P70-P7F	Signal
	P80-P8F	Signal
	P90-P9F	Signal
	PA0-PAF	Signal
	PB0-PBF	Signal
	PC0-PCF	Signal
	PD0-PDF	Signal
	PE0-PEF	Signal
	PF0-PFF	Signal
External bus interface	EXT_master	Transaction
A/D converter	ADTG0-ADTG2	Signal
	AN00	Signal
	AN01-AN15	Signal
	AVCC	Signal
	AVRH	Signal
	AVSS	Signal
Base Timer	TIOA0-TIOA7	Signal
	TIOB0-TIOB7	Signal
Multifunction Timer	FRCK0-FRCK2	Signal
	IC00-IC03	Signal
	IC10-IC13	Signal
	IC20-IC23	Signal
	RTO00-RTO05	Signal
	RTO10-RTO15	Signal
	RTO20-RTO25	Signal

## 4. Trace Result Visualization

Trace result is output to trace file under VCD format. The user can visualize trace result, by using a waveform view supporting VCD format file.

### Wave form viewer


Tool : GTKWave

Source : <http://gtkwave.sourceforge.net/>

The wave form viewer can conduct VCD format file. The viewer is free of charge.

Example view of trace result at GTKWave is shown at Figure 5-1.

Figure 5-1 Example view of trace result at GTKWave

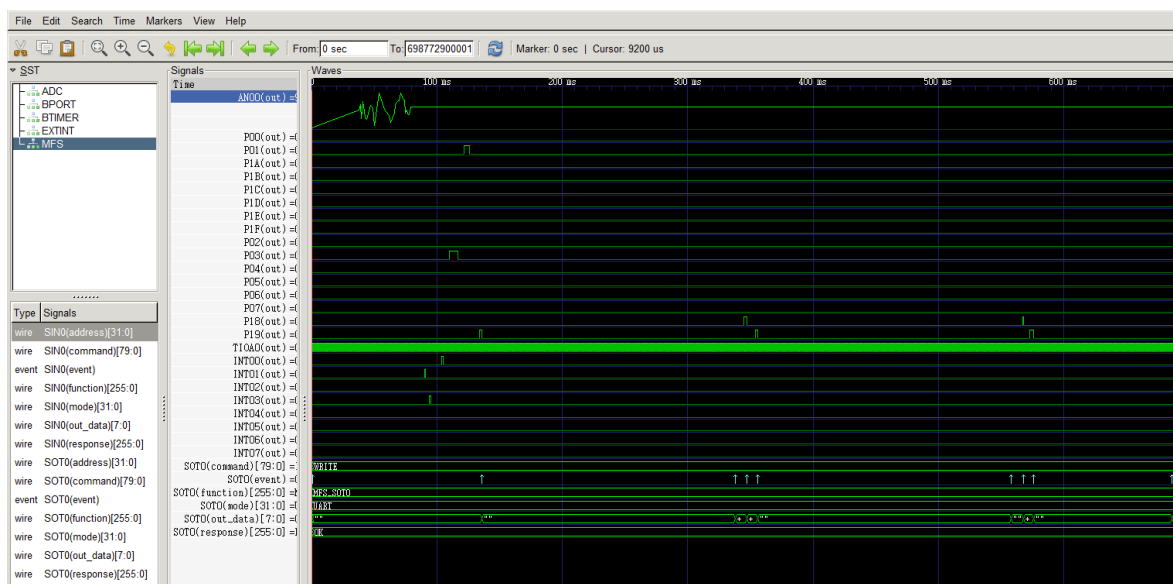

### Note:

1. ContentID, Mode, Command and Response are outputted trace file with ASCII code.
2. You can check the trace result as character, if you display data format change to ASCII on the viewer, when the trace result is displayed on the waveform viewer.

## MAJOR CHANGES

Page	Section	Changes
Revision 1.0		
-	-	Initial release





MN706-00044-1v0-E

---

**Spansion • Controller Manual**

FM3 Family  
32-BIT MICROCONTROLLER  
Virtual Starter Kit User Manual

---

July 2014 Rev. 1.0

Published : Spansion Inc.  
Edited : Communications Dept.

---



**Colophon**

The products described in this document are designed, developed and manufactured as contemplated for general use, including without limitation, ordinary industrial use, general office use, personal use, and household use, but are not designed, developed and manufactured as contemplated (1) for any use that includes fatal risks or dangers that, unless extremely high safety is secured, could have a serious effect to the public, and could lead directly to death, personal injury, severe physical damage or other loss (i.e., nuclear reaction control in nuclear facility, aircraft flight control, air traffic control, mass transport control, medical life support system, missile launch control in weapon system), or (2) for any use where chance of failure is intolerable (i.e., submersible repeater and artificial satellite). Please note that Spansion will not be liable to you and/or any third party for any claims or damages arising in connection with above-mentioned uses of the products. Any semiconductor devices have an inherent chance of failure. You must protect against injury, damage or loss from such failures by incorporating safety design measures into your facility and equipment such as redundancy, fire protection, and prevention of over-current levels and other abnormal operating conditions. If any products described in this document represent goods or technologies subject to certain restrictions on export under the Foreign Exchange and Foreign Trade Law of Japan, the US Export Administration Regulations or the applicable laws of any other country, the prior authorization by the respective government entity will be required for export of those products.

**Trademarks and Notice**

The contents of this document are subject to change without notice. This document may contain information on a Spansion product under development by Spansion. Spansion reserves the right to change or discontinue work on any product without notice. The information in this document is provided as is without warranty or guarantee of any kind as to its accuracy, completeness, operability, fitness for particular purpose, merchantability, non-infringement of third-party rights, or any other warranty, express, implied, or statutory. Spansion assumes no liability for any damages of any kind arising out of the use of the information in this document.

Copyright © 2014 Spansion. All rights reserved. Spansion®, the Spansion logo, MirrorBit®, MirrorBit® Eclipse™, ORNAND™, Easy DesignSim™, Traveo™ and combinations thereof, are trademarks and registered trademarks of Spansion LLC in the United States and other countries. Other names used are for informational purposes only and may be trademarks of their respective owners.